

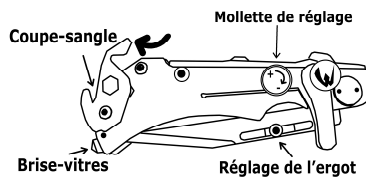
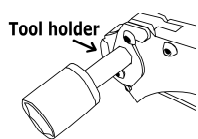


## INSTRUCTIONS W POCKET

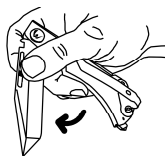

### Opening with one hand:

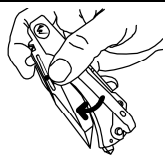



1- Push the blade at the notch

2- Continue to lift the blade

3- Force on the notch to lock the blade

### Closing with one hand : You can choose to activate or deactivate the frame-lock with the .screw

#### **Rotary screwed=Frame-lock deactivated**

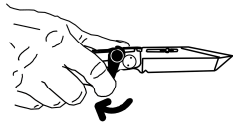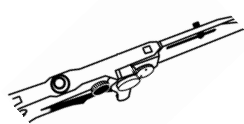


1-Screw the rotary to deactivate the frame-lock.

2- Act on the level with the index finger

3- Fold the blade

#### **Rotary unscrewed=Frame-lock activated**

 

1- Press on the frame-lock with the index finger

2- Hold the frame-lock down to activate the lever with the middle.

3- Fold the blade by holding the lever.

## MAINTAINING ADVICES

The cutting quality of Wildsteer articles will last when regularly sharpened with a diamond stone or fine grain ceramic for stainless steels. Less effort will be needed with a well sharpened tool and therefore its use will be much easier.

In case of dirty mark into WX-lock system, use a little brush to clean it.

## WARRANTY CERTIFICATE

Wildsteer articles warranty runs during 2 years when the items are used normally. These items will only be exchanged in case of manufacturing flaw.